



**TOOL MODEL: EDGE-1S**

**PRESSURE/TORQUE CONVERSION CHART**

**Standard Torque Chart**

<b>PRESSURE IN PSI</b>	<b>FT.LBS.</b>	<b>TORQUE IN</b>		<b>PRESSURE IN BAR</b>
		<b>KGM</b>	<b>NM</b>	
1500	178	25	241	104
1600	190	26	258	110
1800	215	30	292	124
2000	240	33	325	138
2200	265	37	359	152
2400	290	40	393	165
2600	315	44	427	179
2800	340	47	461	193
3000	365	50	495	207
3200	390	54	529	220
3400	416	58	564	234
3600	441	61	598	248
3800	467	65	633	262
4000	492	68	667	276
4200	517	72	701	290
4400	543	75	736	303
4600	568	79	770	317
4800	594	82	805	331
5000	619	86	839	345
5200	645	89	874	358
5400	670	93	909	372
5600	696	96	943	386
5800	721	100	978	400
6000	747	103	1013	414
6200	772	107	1047	427
6400	797	110	1081	441
6600	823	114	1115	455
6800	848	117	1149	468
7000	873	121	1183	482
7200	899	124	1218	496
7400	925	128	1253	510
7600	950	131	1288	524
7800	976	135	1323	538
8000	1002	139	1358	552
8200	1027	142	1393	565
8400	1053	146	1427	579
8600	1078	149	1462	593
8800	1104	153	1496	607
9000	1129	156	1530	620
9200	1155	160	1565	634
9400	1180	163	1600	648
9600	1206	167	1635	662
9800	1231	170	1669	676
10000	1257	174	1704	690

\* ISO DOCUMENT 9000

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** Your **HYTORC TORQUE MACHINE** is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

- **READ ALL INSTRUCTIONS.**
  - **KEEP WORK AREA CLEAN AND WELL LIT.**
  - **CONSIDER WORK AREA ENVIRONMENT.** Electrical Pumps should never be used in an atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Also Note: metal to metal contact can cause sparks, precautions should be taken.
  - **AVOID PREMATURE TOOL STARTING.** The Pump Remote Control is for the **TOOL OPERATOR** only.
  - **STAY CLEAR DURING OPERATION.** In most cases, the tool will allow “hands free” operation. If the tool must be held or steadied during operation, use alternative means of securing the tool to the application
  - **GUARD AGAINST ELECTRIC SHOCK.** Ensure the pump is properly grounded and the proper voltage is being used
  - **STORE IDLE TOOLS.** When not in use, tool and accessories should be properly stored to avoid deterioration
  - **USE RIGHT TOOL.** Don't force small tools or attachments to do the job of a larger tool. Don't use a tool for purposes not intended.
  - **PROPER SAFETY ATTIRE.** When handling/operating hydraulic equipment use work gloves, hard hats, safety shoes and other applicable clothing.
  - **USE SAFETY GLASSES.**
  - **MOVING EQUIPMENT.** Do not use hydraulic hoses, uni-swivels, pump power or remote cords as means of moving the equipment.
  - **MAINTAIN TOOLS WITH CARE.** For top performance, inspect tools, powerpack and accessories for visual damage frequently and always prior to use. Always follow instruction for proper tool and pump maintenance. Refer to the Operations Maintenance Section for further clarification
  - **STAY ALERT.** Watch what you are doing. Use Common sense. Do not use power equipment under the influence of any mood altering substances.
  - **PRIOR TO OPERATION**
    - Ensure that all hydraulic connections are securely connected and there is no leakage
    - Verify that the Hydraulic hoses are not kinked or otherwise damaged.
    - Ensure the square drive and its retainer are fully and securely engaged.
    - Be certain that all connectors, elbows, fitting and swivels are not bent, loose or damaged.
  - **PRIOR TO USE.**
    - Check sockets for size, quality and flaws. (Do not use if questionable)
    - Cycle tool to ensure proper function.
    - Locate a solid, secure reaction point.
    - Be sure the reaction arm retaining clamp is fully engaged.
    - Be sure the hydraulic hoses are free of the reaction point.
    - Pressurize the system momentarily; if the tool tends to “ride up” or to “creep”, stop and re-adjust the reaction arm to a more solid and secure position.
- NOTE:** Remain clear of the reaction arm during operation and never put body parts between reaction arm and reaction surfaces.
- **ALWAYS USE QUALITY ACCESSORIES.** Always use top quality impact sockets in good condition which are the correct size and fully engage the nut. Hidden flaws, however, remain a possibility which could cause breakage, so stay clear of sockets during operation
  - **DO NOT USE** other equipment to enhance performance (Hammer on Socket/Tool)**NOTE:** Hytorc Pumps are designed to operate Hytorc Tools only. Damage may occur to the pump or the product that is being operated due to misuse.

**SAVE THESE INSTRUCTIONS FOR FUTURE USE!**