



**TOOL MODEL: STEALTH 4**

**PRESSURE/TORQUE CONVERSION CHART**

**Standard Torque Chart**

<b>PRESSURE IN PSI</b>	<b>FT.LBS.</b>	<b>TORQUE IN KGM</b>	<b>NM</b>	<b>PRESSURE IN BAR</b>
1500	604	84	819	104
1600	644	89	874	110
1800	725	100	983	124
2000	806	111	1093	138
2200	885	122	1200	152
2400	964	133	1307	165
2600	1043	144	1414	179
2800	1122	155	1521	193
3000	1201	166	1628	207
3200	1281	177	1737	220
3400	1361	188	1846	234
3600	1442	199	1954	248
3800	1522	210	2063	262
4000	1602	222	2172	276
4200	1680	232	2278	290
4400	1758	243	2384	303
4600	1837	254	2490	317
4800	1915	265	2596	331
5000	1993	276	2702	345
5200	2075	287	2813	358
5400	2157	298	2925	372
5600	2240	310	3036	386
5800	2322	321	3147	400
6000	2404	332	3259	414
6200	2485	344	3369	427
6400	2566	355	3478	441
6600	2647	366	3588	455
6800	2728	377	3698	468
7000	2809	388	3808	482
7200	2887	399	3913	496
7400	2965	410	4019	510
7600	3042	421	4124	524
7800	3120	432	4230	538
8000	3198	442	4335	552
8200	3280	454	4446	565
8400	3362	465	4558	579
8600	3444	476	4669	593
8800	3526	488	4780	607
9000	3608	499	4891	620
9200	3690	510	5003	634
9400	3773	522	5114	648
9600	3855	533	5226	662
9800	3938	545	5338	676
10000	4020	556	5450	690

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** Your **HYTORC TORQUE MACHINE** is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

- **READ ALL INSTRUCTIONS.**
  - **KEEP WORK AREA CLEAN AND WELL LIT.**
  - **CONSIDER WORK AREA ENVIRONMENT.** Electrical Pumps should never be used in an atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Also Note: metal to metal contact can cause sparks, precautions should be taken.
  - **AVOID PREMATURE TOOL STARTING.** The Pump Remote Control is for the **TOOL OPERATOR** only.
  - **STAY CLEAR DURING OPERATION.** In most cases, the tool will allow “hands free” operation. If the tool must be held or steadied during operation, use alternative means of securing the tool to the application
  - **GUARD AGAINST ELECTRIC SHOCK.** Ensure the pump is properly grounded and the proper voltage is being used
  - **STORE IDLE TOOLS.** When not in use, tool and accessories should be properly stored to avoid deterioration
  - **USE RIGHT TOOL.** Don't force small tools or attachments to do the job of a larger tool. Don't use a tool for purposes not intended.
  - **PROPER SAFETY ATTIRE.** When handling/operating hydraulic equipment use work gloves, hard hats, safety shoes and other applicable clothing.
  - **USE SAFETY GLASSES.**
  - **MOVING EQUIPMENT.** Do not use hydraulic hoses, uni-swivels, pump power or remote cords as means of moving the equipment.
  - **MAINTAIN TOOLS WITH CARE.** For top performance, inspect tools, powerpack and accessories for visual damage frequently and always prior to use. Always follow instruction for proper tool and pump maintenance. Refer to the Operations Maintenance Section for further clarification
  - **STAY ALERT.** Watch what you are doing. Use Common sense. Do not use power equipment under the influence of any mood altering substances.
  - **PRIOR TO OPERATION**
    - Ensure that all hydraulic connections are securely connected and there is no leakage
    - Verify that the Hydraulic hoses are not kinked or otherwise damaged.
    - Ensure the square drive and its retainer are fully and securely engaged.
    - Be certain that all connectors, elbows, fitting and swivels are not bent, loose or damaged.
  - **PRIOR TO USE.**
    - Check sockets for size, quality and flaws. (Do not use if questionable)
    - Cycle tool to ensure proper function.
    - Locate a solid, secure reaction point.
    - Be sure the reaction arm retaining clamp is fully engaged.
    - Be sure the hydraulic hoses are free of the reaction point.
    - Pressurize the system momentarily; if the tool tends to “ride up” or to “creep”, stop and re-adjust the reaction arm to a more solid and secure position.
- NOTE:** Remain clear of the reaction arm during operation and never put body parts between reaction arm and reaction surfaces.
- **ALWAYS USE QUALITY ACCESSORIES.** Always use top quality impact sockets in good condition which are the correct size and fully engage the nut. Hidden flaws, however, remain a possibility which could cause breakage, so stay clear of sockets during operation
  - **DO NOT USE** other equipment to enhance performance (Hammer on Socket/Tool)**NOTE:** Hytorc Pumps are designed to operate Hytorc Tools only. Damage may occur to the pump or the product that is being operated due to misuse.

**SAVE THESE INSTRUCTIONS FOR FUTURE USE!**